



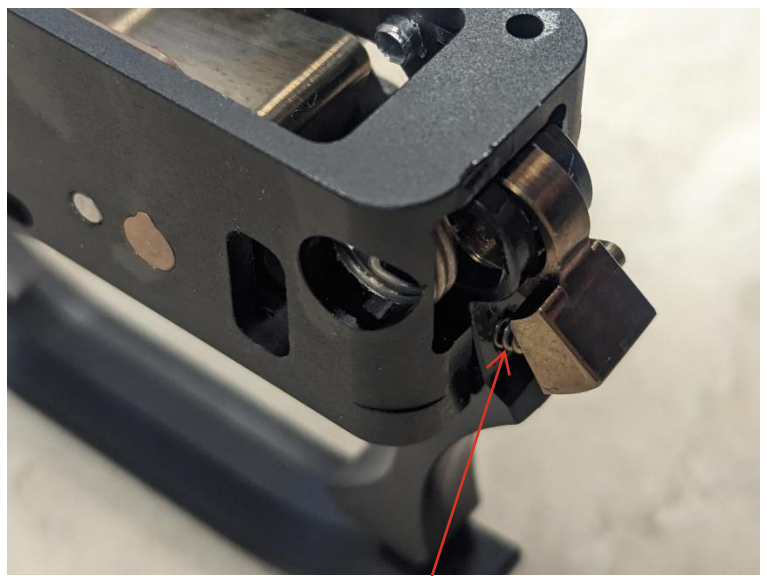

Torsion spring legs

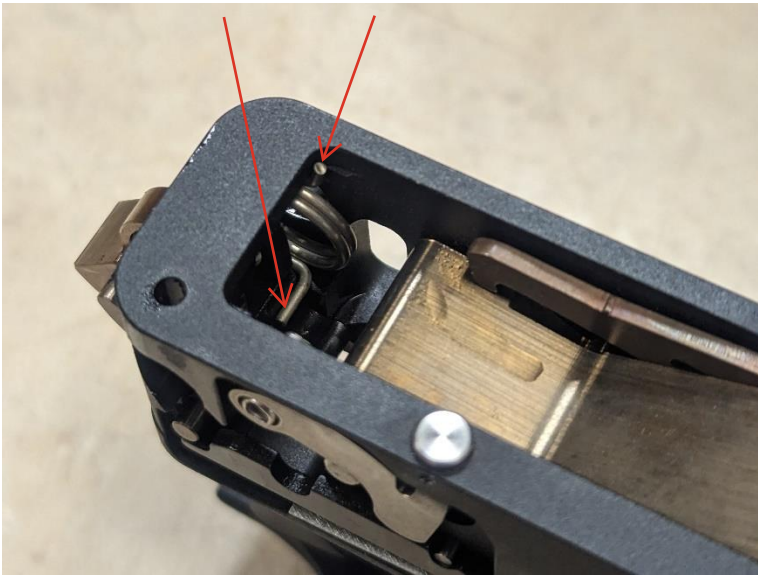

Locking cam spring



Grooved pin end must enter frame from the right side



Torsion spring should interfere with pin entering. Push the spring towards the muzzle end to allow the pin to enter through while pushing the pin in from right to left.